

Introducing Top Pro

Our classic, versatile water dispenser for business and healthcare.

- Versatile water dispenser to suit diverse requirements
- Choice of up to four water types: unchilled and chilled still, chilled semi-sparkling and sparkling
- Flexible capacity: two versions for medium or high consumption, both with BRITA filters (Capacity: 50 l/h or 85 l/h)
- Outstanding hygiene through BRITA HygienePlus option – trusted by the healthcare industry for 20+ years



**applies to BRITA Top Pro

Top Pro

Our classic, versatile water dispenser for business and healthcare.




Medium- or high-capacity versions



The **Easy Access Panel** helps create a barrier-free, inclusive working environment. The optional control unit can be positioned to provide easy access for wheelchair users



The optional **BRITA HygienePlus triple** safeguard is designed for environments with stringent hygiene requirements. This protects your dispenser from contamination and germs

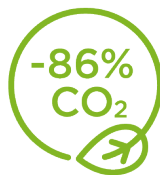

Our water dispensers produce 86% less CO₂ emissions than pre-bottled water and 64% less than bottled water dispensers


Watch our Video on Youtube 

Contact us today and let's talk about your BRITA water dispenser solution | www.brita.net



Intuitive display and choice of **touch dispensing or mechanical buttons**


ThermalGate™ powerful thermal-disinfection feature

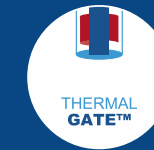

High-quality materials **stainless steel**

Focus on sustainability: natural refrigerant and extremely low power consumption



Two installation options:
• Floorstanding
• Countertop

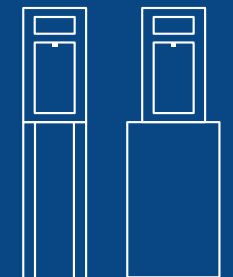





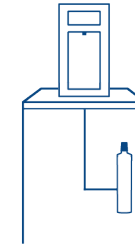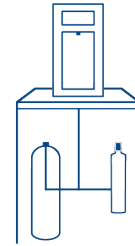

Top Pro



Technical data



Model	Top Pro still + sparkling	Top Pro still	
Design / Type	countertop	countertop	base cabinet
Types of water	   	 	
Configuration options			
Hygiene feature	BRITA ThermalGate™ or BRITA HygienePlus	BRITA ThermalGate™ or BRITA HygienePlus	
Dispensing buttons	touch dispensing or mechanical buttons	touch dispensing	
For installation independent of existing counters			base cabinet
For installation in barrier-free environments	Easy Access Panel	Easy Access Panel	
For installation without waste water connection	wastewater container	wastewater container	
Specifications			
Cooling capacity	medium cooler: 50 l/h large cooler: 85 l/h	medium cooler: 50 l/h large cooler: 85 l/h	
Unit dimensions (W x H x D)	278 x 530 x 518 mm	278 x 530 x 518 mm	base cabinet: 278 x 910 x 518 mm base plate: 440 x 4 x 510 mm
Dispensing height	330 mm	330 mm	
Weight	Top with medium cooler: 35 kg Top with large cooler: 40 kg	Top with medium cooler: 33 kg Top with large cooler: 38 kg	base cabinet: 16 kg base plate: 7 kg
Max. power consumption	Top with medium cooler: 440 W Top with large cooler: 540 W	Top with medium cooler: 440 W Top with large cooler: 540 W	
Max flow rate, still water	2 l/min	2 l/min	
Max flow rate, sparkling water	1.6 l/min	-	